


INSTRUCTIONS FOR USE AND CONNECTIONS

MULTIPLEXER 2032

- 1) Connect the 1015 cable on the Rear Panel of the PT2025 unit as a 1011 cable except that the 4p LEMO connector with the taper sleeve red is connected on the I/O Board.
- 2) Connect the other end of the 1015 cable on the MUX 2032 as follows :

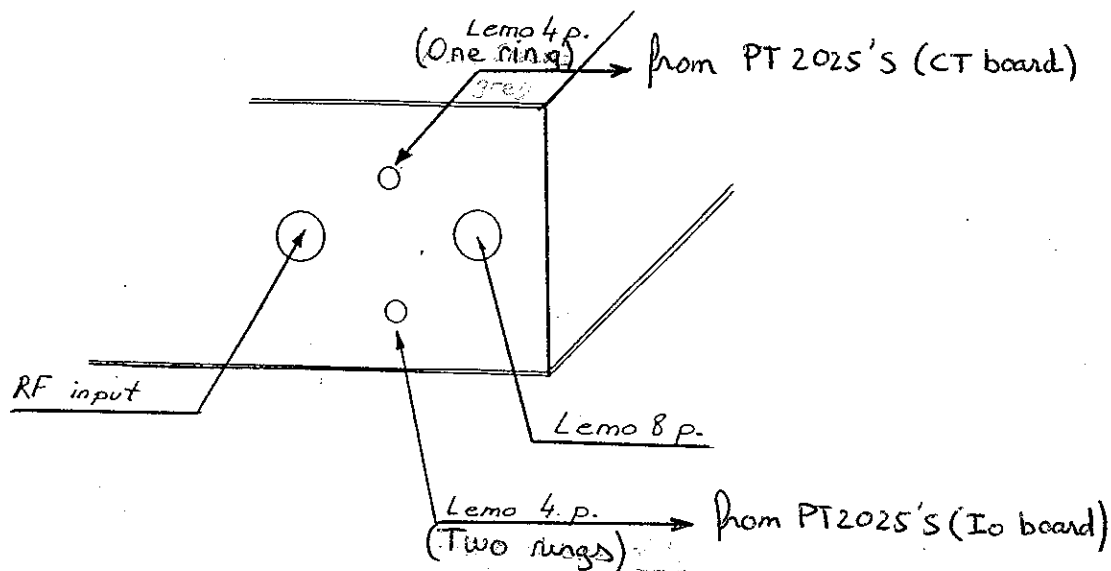

- 3) Connect the MUX 2031 on the MUX 2032 with 1011 cables.
- 4) The MPX button on the PT2025's Front panel or the command Pc, make the selection of the outputs of the MUX 2031.
- 5) The new command Ic (c= A,B,C,D,E,F,G,H), make the selection of the outputs of the MUX 2032.

NOTE :

This command is not in the User's Manual but it works exactly in the same way as the command "Pc" described in pages 24 and 48.

CONNECTION SCHEMATIC

=====

